

Instruction Mains Transfer

Automatic mains takeover

- If the light tower is powered by mains electricity and the supply fails, the engine will automatically start after 12 seconds. As a result, the lighting will be interrupted for approximately 12 seconds.
- When mains power is restored, the engine will automatically shut down after a short delay.

Installing the Mains Transfer System

- The system can be connected in three ways:
 - 400V 32A 5-pin CEE red with Popa adapter
 - 16A CEE blue
 - 230v Schuko



Popa Adapter


Activating the Mains Transfer

- Set the DSE 4520 switch to "ON".
- The mains transfer can then be activated in two ways:
 - Select the switch "MANUAL"
 - or**
 - Select the switch "TIMER"

Select only one of these options! do not use both simultaneously.

Set the DSE 4520 switch to "ON"

Switch
"MANUAL"

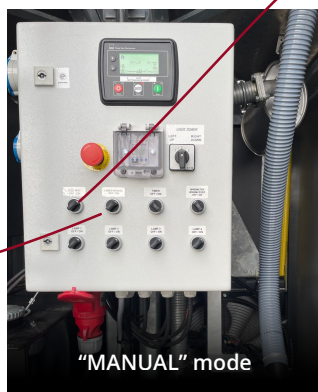

"MANUAL" mode

Switch
"TIMER"



"TIMER" mode

Always retract the mast before moving