

Instructions for balloon lighting without a generator

Placement

Unloading must be carried out by:

- Use the 4 lifting eyes at the top corners of the cage.
- Using a forklift with a minimum lifting capacity of 1200 kg.

The Popa light tower must always be placed on a flat, stable surface.
(The maximum permitted tilt angle is 5°.)

If there is any doubt about the ground conditions, always contact the supplier.

Installing the Light Tower

- Extend the light mast approximately 2 meters to allow easy adjustment of the light fixtures. This is done by operating the “Lichtmast UP” switch.
- Extend the mast to the required height by operating the “Lichtmast UP” switch.
- Select either **Manual** or **Timer** mode:
Manual: OFF/ON, You control when the light tower is switched on or off.
Timer: OFF/ON, The light tower will switch on and off automatically at the preset times.

Shutting Down

- Set all switches to “OFF”.
- Retract the mast by operating the “Lichtmast” switch “UP/DOWN”

During retraction, make sure that the cabling remains outside the housing until the mast is fully lowered.



Always secure the light tower from the public, bystanders, and unauthorized persons

Always retract the mast before moving the unit