

# Instructions Wind Meter for Balloon Lighting with Generator

## Installing the Wind Meter

- Place the magnetic base on top of the light dome, within the square surface. The wind meter can then be mounted onto the magnetic base. Plug the PowerCON connector at the bottom of the control cabinet into the power supply (see photos).



Attention!  
The wind meter is very fragile



Hydraulic crane  
must remain open  
and ensure that the  
battery is connected.

- Extend the mast to the desired height by operating the "Lichtmast UP" switch.
- Set the selector switch "Windmeter" to "ON". A green indicator light will appear on the wind meter. The light tower will lower by one meter; afterwards, raise the mast to the desired height. The wind meter is now activated.

## Wind Meter Operation

- In the event of sustained wind force 6, the light tower will automatically lower to 1 meter above the housing. The lighting will remain operational.
- If the wind meter needs to be reactivated, set the selector switch "WINDMETER" to "OFF" and repeat the "ON" procedure.

## Removing the Wind Meter

- Set all switches to "OFF".
- Retract the mast by operating the "Lichtmast" "UP/DOWN" switch.
- The wind meter is very fragile. After removal, immediately place it back in the designated storage case.

**Always retract the mast before moving**