

Instruction wind meter with generator

Installing the Wind Meter

- Start the diesel generator by setting the "MANUAL" switch to the "ON" position. The startup cycle will then proceed automatically.
- Place the wind meter centrally on top of the mast, in the designated mounting tube. Then plug the PowerCON connector into the power supply (see photos).

Attention! The wind meter is very fragile




The Popa light tower must always be placed on a flat and stable surface.

(The maximum permitted tilt angle is 5°)

If there is any doubt about the ground conditions, contact the manufacturer.

- Extend the mast to the desired height by operating the "Lichtmast UP" switch.
- Set the selector switch "Windmeter" to "ON". A green indicator light will appear on the wind meter. The light tower will lower by one meter; afterwards, raise the mast to the desired height. The wind meter is now activated.

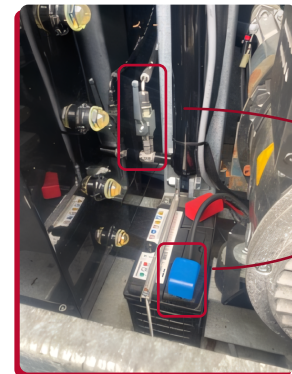

Hydraulic crane must remain open and ensure that the battery is connected.

Wind Meter Operation

- In the event of sustained wind force 6, the light tower will automatically lower to 1 meter above the housing. The lighting will remain operational.
- If the wind meter needs to be reactivated, set the selector switch "WINDMETER" to "OFF" and repeat the "ON" procedure.

Removing the Wind Meter

- Set all switches to "OFF".
- Retract the mast by operating the "Lichtmast" "UP/DOWN" switch.
- The wind meter is very fragile. After removal, immediately place it back in the designated storage case.

Always retract the mast before moving