

# instructions without a generator

## Placement

Unloading must be carried out by:

- Use the 4 lifting eyes at the top corners of the cage.
- Using a forklift with a minimum lifting capacity of 1200 kg.

## Installing the Light Tower

- Extend the light mast approximately 2 metres using the “Light Mast UP” switch to allow easy adjustment of the light fixtures.
- Use the installed ladder to access the roof of the light tower and adjust the light fixtures to the desired direction.
- Extend the mast to the required height using the “Lichtmast UP” switch.
- Select either **Manual** or **Time** mode:
  - Manual:** OFF/ON, You control when the lights are switched on or off.
  - Time:** OFF/ON, The light tower will switch on and off automatically at the preset times.

**The Popa light tower must always be placed on a flat, stable surface.**

(The maximum permitted tilt angle is 5°.)

If there is any uncertainty about the substrate, always contact the supplier.

## Option

- The light tower is equipped with a switch to choose between 1 kW and 2 kW. This allows you to choose whether the lamps should be set to 50% or 100% light output.

## Shutting Down

- Set all switches to “OFF”.
- Retract the mast using the “Lichtmast UP/DOWN” switch.
- **During mast retraction, ensure that the cabling does not become trapped between the mast sections. Fully retract the mast. Then return the lamps to their original position so that they fit inside the housing.**



Always secure the light tower from the public, bystanders, and unauthorized persons

**Always retract the mast before moving the unit**