


Timer Instructions


Programming Switching Times

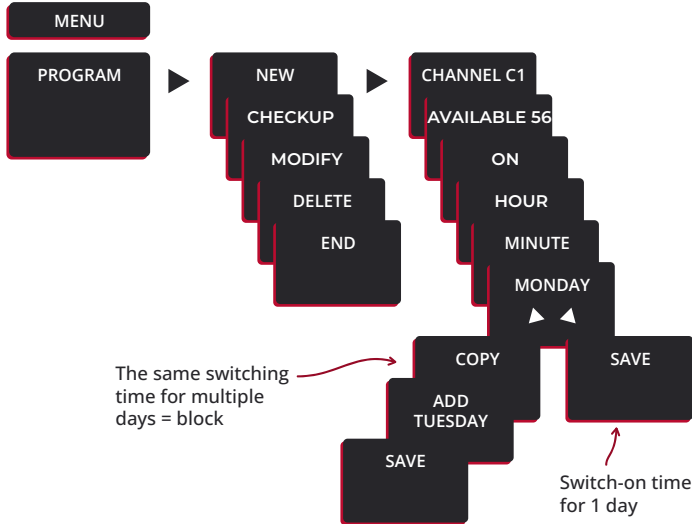

- Press MENU
- Select PROGRAM, confirm with OK
- Select NEW, confirm with OK
- Select CHANNEL C1 or C2, confirm with OK
- Select ON (for switch-on times), confirm with OK
- Set the desired switch-on time (Mon–Fri, 7:30), confirm with OK
- Select COPY, confirm with OK
- PLUS TUESDAY appears, confirm with OK and press OK to also confirm Wed, Thu, and Fri.
- Continue with ► until SAVE appears.
- Met OK bevestigen.
- For the switch-off time, repeat all steps, but instead of ON select OFF and enter 12:00 for the hour and minute.


You can modify or delete a time block. This may be a block set for multiple days (for example, a week), or an individual time set for a single day.

Changing Switching Times

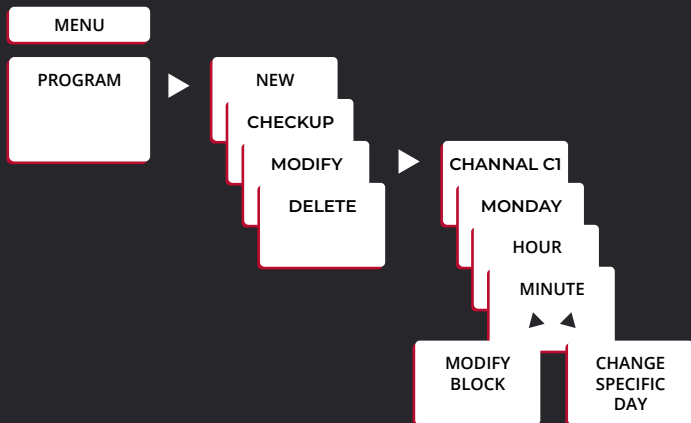

- Modify individual switching times
- Press MENU
- Select PROGRAM, confirm with OK
- Select MODIFY, confirm with OK
- Select CHANNEL C1 or C2, confirm with OK
- Select the day, confirm with OK
- Select CHANGE HOUR, use the + or – keys to adjust the hour and minute, then confirm with OK.
- To modify multiple switching times, select MODIFY BLOCK, confirm with OK.

Deleting Switching Times

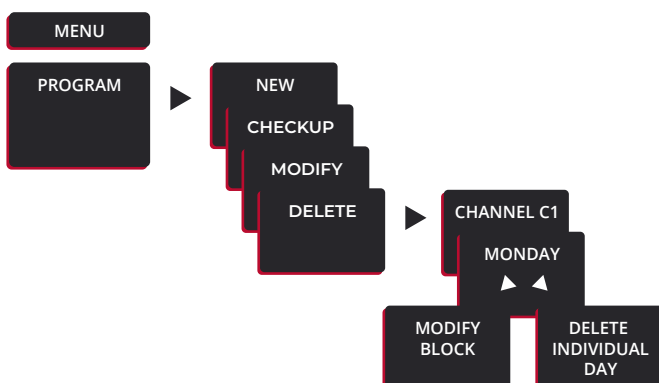

- Press MENU
- Select PROGRAM, confirm with OK
- Select DELETE, confirm with OK
- MONDAY appears, confirm with OK
- Select DELETE BLOCK, confirm with OK
- With ► DELETE MONDAY etc., individual days can also be deleted.



Set DSE to ON



Set the timer to ON